

# Rotostay Top bearing

Not to scale

## To Dismantle:

- Punch out the roll pin from the rigging screw stud
- Unscrew the swivel from the rigging screw stud
- Remove the grub screw with an Allen key
- Unscrew the inner cup from the outer cup using a Pin spanner
- Punch out the roll pin from the thrust nut
- Unscrew the thrust nut

